

MISC		FUEL SYSTEMS					CONTROL CABIN LIGHTING						AUTO BRAKE			
CLOCK DISP	DOOR WARN	TEMP IND	QTY	FUELING ENG 2	ENG 1	FUELING	DOME WHITE	CONTROL STAND	STBY BKGD	STBY BKGD	COMP	MAP & KIT	OBS HEADING	CONT		
F	M	M	M	M	M	M	F	M	M	M	M	M	M	F	M	F

		BOOST PUMP TANK 2 FWD		FUEL SHUTOFF VALVE		BOOST PUMP TANK 1 FWD		PANEL & INSTR 26V PROMARY F/O			INDICATOR MASTER DIM BUS NO 1 DC NO 2 DC							
CLOCK																		
M	F	M	F	M	F	M	F	F	F	M	M	M	M	M	M	F	F	F

DOOR LOCK		BOOST PUMP TANK 2 AFT		CROSS FEED VALVE		BOOST PUMP TANK 1 AFT		ELEX PANEL		CKT BRK PNL		DIM & TEST		TO DISCONNECT CIRCUIT PULL [3] BREAKERS			LANDING GEAR LATCH & PRESS WARN		AIR / GND RELAY & LTS
M	F	M	F	M	F	M	F	M	F	M	M	M	M	M	M	M	F	M	M

LAV MIRROR EXT PWR		SHUTOFF VALVE ENG 2		BOOST PUMP CTR TANK RIGHT		SHUTOFF VALVE ENG 1		MASTER CAUTION						NOSE GEAR STEER		NOSE GEAR AIR / GND		AURAL WARN	
								AIR COND	ANTI ICE	FUEL	ANNUNCIATION NO. 1	BAT							
M	F	M	F	M	F	M	M	M	M	M	M	M	M	M	M	M	M	M	M

SERVICE OUTLETS 115V AC		FUEL NO. 1 AFT NO. 2 FWD CTR L		BOOST PUMP CTR TANK LEFT		FUEL NO. 1 FWD NO. 2 AFT CTR R		OVERHEAD TO DISCONNECT PULL [2] BREAKERS				AFDS FLOOD LT		SECT 7		SECT 8		ANTI-SKID INDB			OUTBD		FAIL WARN & PARK BR
								28V PRIM		28V SEC													
M	F	M	F	M	F	M	F	M	F	M	F	M	M	M	M	M	M	M	M	M	M	M	M

28V DC		FUEL QTY IND				OVERHEAD SV SECONDARY						PITOT STATIC										
		R TANK	CTR TANK	L TANK	FUEL PANEL																	
M	F	M	M	M	M	F	F	F	M	M	M	M	M	M	F	F	M	M				