

INVERTER
CONT

M

BAT
TRANS CONT

F

M

F

STANDBY POWER
IND LT AUTO CONT

M

M

APU
CONT

M

BATBUS CONT
AUTO MANUAL

M

M

FUELING &
EXT PWR
CONT

M

GEN
PWR
CONT

M

ENTRY
LIGHT
DIM

M

DC BUS POWER
NO. 2 NO.1

M

M

F

DC BUS INDICATION

BUS NO. 2

STBY

M

BAT

M

HOT
BAT

M

BUS
NO.1

M

GALLERY
PWR. CBNT.

M

TR
NO. 3

M

BAT
BUS

M

F

F

DC STBY
BAT

F

POWER
TR

M

EXT
PWR
CONT

M

AC
TRANSFER
BUS IND

F

M